

Schablone für den Heckschürzenausschnitt


für BMW 5er F10/F11

(Template for the tail apron cutout

for BMW 5 series F10/F11)

links
(left)

Anlegepunkt Designkante
(Point of application designedge)

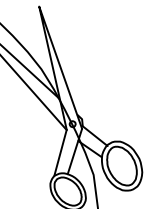

Beschrittkante
(cutting edge)

Heckschürzenunterkante
(Rear skirt lower edge)

